


912A PGM Garment Display Metal Shelves

Assembling Guide

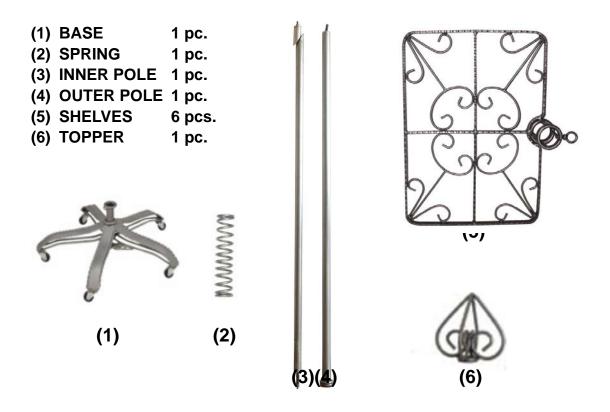






<u>Step 2</u>

Gently place SPRING on top of the BASE.

Step 1 Place BASE firmly on the ground.

<u>Step 3</u>

Insert INNER POLE into the BASE through SPRING.

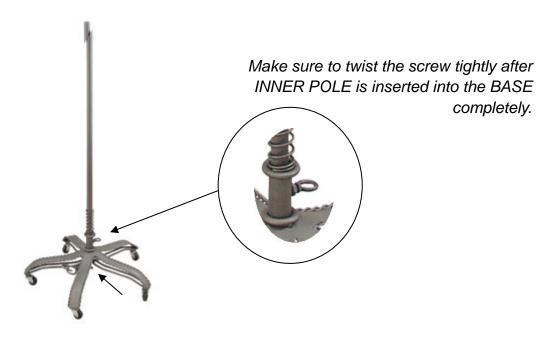

Make sure to have INNER POLE standing on the end of the foot pedal.



Step 4 Slide OUTER POLE over INNER POLE.




The top of INNER POLE must be aligned like this while stepping down the foot pedal.

When sliding OUTER POLE, make sure you are stepping down on the foot pedal with the top of INNER POLE aligned.

<u>Step 5</u> Slide SHELVES respectively over the OUTTER POLE like this:

Step 6 Twist the TOPPER on.

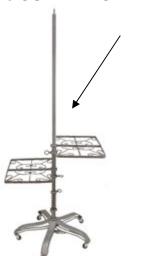



Congratulations !! Installation Complete.