

912AS PGM Garment Display Metal Shelves w Arm

Assembling Guide(reference 912A)

- (1) **BASE** 1 pc.
- (2) **SPRING** 1 pc.
- (3) **INNER POLE** 1 pc.
- (4) **OUTER POLE** 1 pc.
- (5) **SHELVES** 3 pcs.
- (6) **TOPPER** 1 pc.




(1)



(2)



(3)(4)

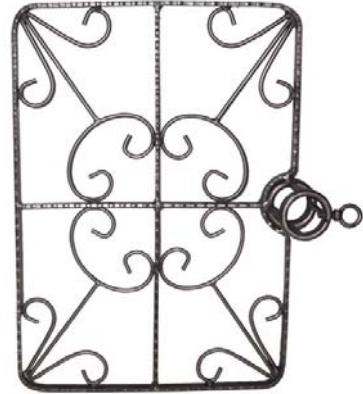

(5)



(6)

Step 2



Gently place **SPRING on top of the **BASE**.**

Step 1

Place **BASE firmly on the ground.**

Step 3

Insert **INNER POLE into the **BASE** through **SPRING**.**



*Make sure to twist the screw tightly after **INNER POLE** is inserted into the **BASE** completely.*

*Make sure to have **INNER POLE** standing on the end of the foot pedal.*



Step 4

Slide OUTER POLE over INNER POLE.



The top of INNER POLE must be aligned like this while stepping down the foot pedal.

When sliding OUTER POLE, make sure you are stepping down on the foot pedal with the top of INNER POLE aligned.

Step 5

Slide SHELVES respectively over the OUTER POLE like this:



Step 6

Twist the TOPPER on.



Congratulations !! Installation Complete.