

**912F PGM Belt/Tie Rack**

**Assembling Guide**

- (1) BASE
- (2) COIL
- (3) POLE 1
- (4) POLE 2
- (5) ROUND PLATE 1
- (6) ROUND PLATE 2
- (7) SCREW (2 pcs)
- (8) TOPPER



(1)



(2)




(7)




(8)



(3) (4)

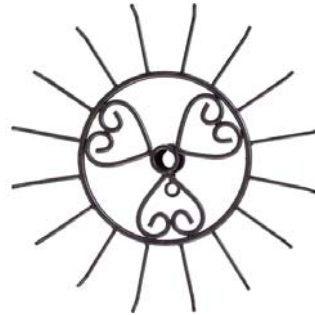


(5)

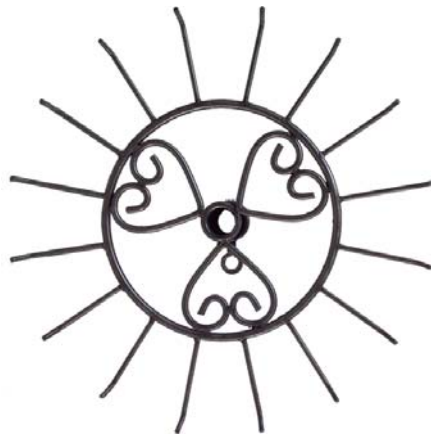

(6)

**Step 2**

**Gently place COIL on top of the BASE to prepare for Step 3.**

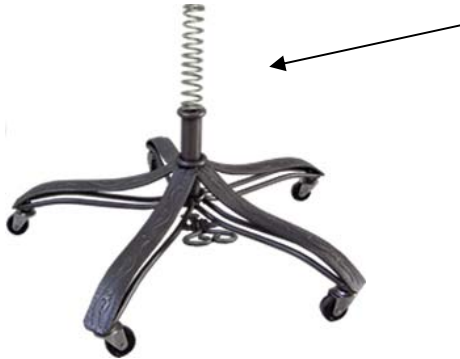


**Step 1**

**Plant BASE firmly on the ground.**

**Step 3**

**Insert POLE 1 into the BASE through COIL.**

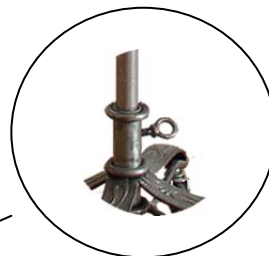


*Make sure to twist the screw tightly after POLE 1 is inserted into the BASE completely.*



**Step 4**

**Slide POLE 2 over POLE 1 in preparation for Step 5.**

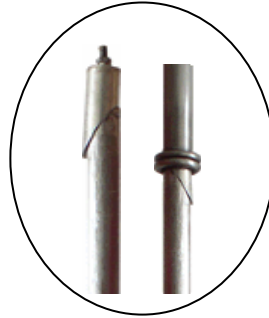

*The top of POLE1 should be closed like this when stepping down the foot pedal.*

*When you are sliding POLE 2 over POLE 1, make sure you are stepping down on the foot pedal with the top of POLE 1 closed*

**Step 5**

**Install ROUND PLATE 2**



*Install SCREW first before slide in ROUND PLATE 2, and make sure to twist tightly*





**Step 6**

**Install ROUND PLATE 1.**



Install SCREW first before slide in ROUND PLATE 1,  
and make sure to twist the screw tightly

**Step 7**

**Last step, install TOPPER on.**

**Congratulations !!!!!  
Installation complete.**

