



911C PGM Waterfall Hook Wall Mount

Assembling Guide




1 pc – Holder



1 pcs – Arm

Install Instruction Guide:

Screw the HOLDER on the wall first, and just insert in the ARM, twist the little screw tightly.

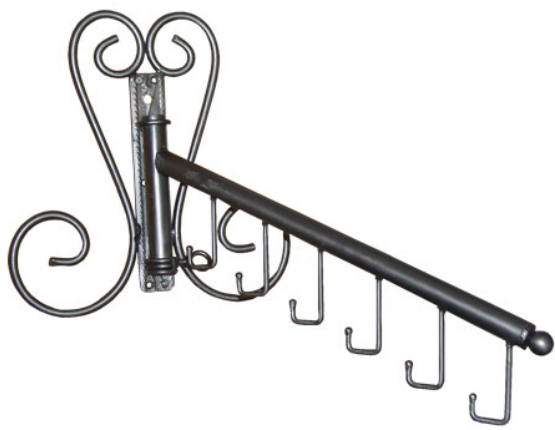

Congratulations !!! Installation Complete.